



#### chair movement

**Seat Height Adjustment.** To raise, pull up on lever **A** and lift your weight. Release the lever at the desired height. To lower, remain seated and pull up on lever **A**. Release the lever at the desired height.

**Tilt Tension Adjustment.** Turn the tension hand wheel **B** clockwise to increase tilt tension. Turn counterclockwise to decrease tension.

# inwood

OFFICE  
ENVIRONMENTS

**Congratulations.** We hope you enjoy your new seating for many years to come. For further assistance, contact us at 800.786.6121 or at [www.inwood.net](http://www.inwood.net) on the internet.