


Installation Instructions

Trek 2500 – Bridge


1. If the unit calls for a bridge and a modesty panel, first thing to do is have the single pedestal desk and the single pedestal credenza faces down. (see A).

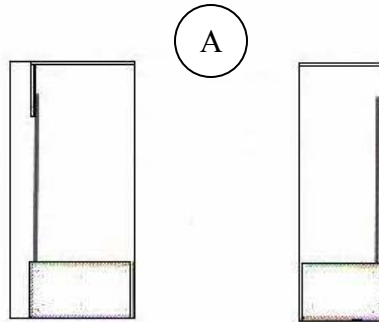

2. If the unit calls for a modesty panel you will need to 2 brackets and four #8-1” screws, (see B&C). Find the hardware kit for the end supports.




3. In the hardware pack, find the screws that are #8-1” you will need four of them, there are two predrilled holes next to the adj glide, place the (see. D) bracket over the predrilled hole and insert the two #8-1” on each end support.

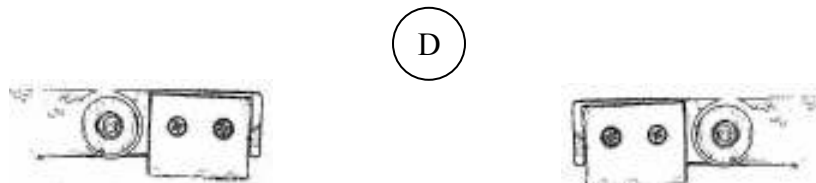


4. Also in the hardware pack find the 4 MPK mend plates and 12- #8 – 5/8 screws (see E & F). The 4 men plates will be attached the desk and the credenza as it is still up side down, (see G)




G

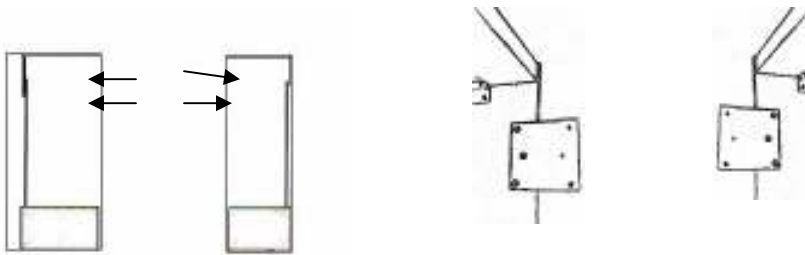

5. Turn both units back over, space them out about 48” apart. Place the bridge top between desk and credenza; flush the bridge top even with both out side edges on desk and credenza. Pull the both units tight against the bridge top. On the underneath side where the 4 mend plates are shown in picture (H). Take the 12 – #8-5/8 screws shown in picture (I) screw them into the mend plates to hold the bridge top tight to the desk and credenza.

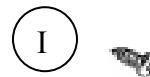

H

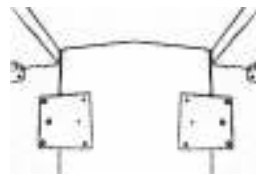

6. Find the hardware pack for the modesty panel; you will need 3 – 915 black corner brackets and 6-#8-5/8 screws to install the 915 brackets to the modesty panel. The modesty panel will have predrilled holes on it, just line up the 915 brackets with the holes in modesty panel shown in **(fig. H)**



7. Place the groove that is machined into the bottom of the modesty panel into the flange of the PHK bracket **(fig 1)** on the pedestal and into the flange of the ESHK bracket on the end panel support. Slowly pivot the modesty panel its vertical position and using the #8x5/8" pan head screws, place these through the holes in the #915 brackets attached to the modesty panel screw these into the top, securing the modesty panel.

Fig. 1



8. After turning the unit over, level the pedestals by using a 3/4" open-end wrench on the outside of the adjustable glides or by using a flat head screwdriver on the top of the adjustable glides from the inside of the cabinet.



9. Reinstall the drawers taking care to make sure the drawers are re-installed into the exact same cabinet and in the exact same order as they were removed. Do this by pulling out the cabinet drawer suspensions to their fully extended position and slid the metal channels attached to the drawers back into these suspensions until they slide under the hook on the rear of the suspensions. Insert the black front tab (see arrow on fig. 1) into the slot in the suspension and press down until this tab and the drawer is firmly seated into one another. Then close the drawer. If the drawer dose not easily close or doses not have a uniform inset border, then the drawer is not correctly reattached or seated into the suspension. Remove the drawer (#1 above) and repeat step # 7.